


RRI-37E IMPACT WRENCH

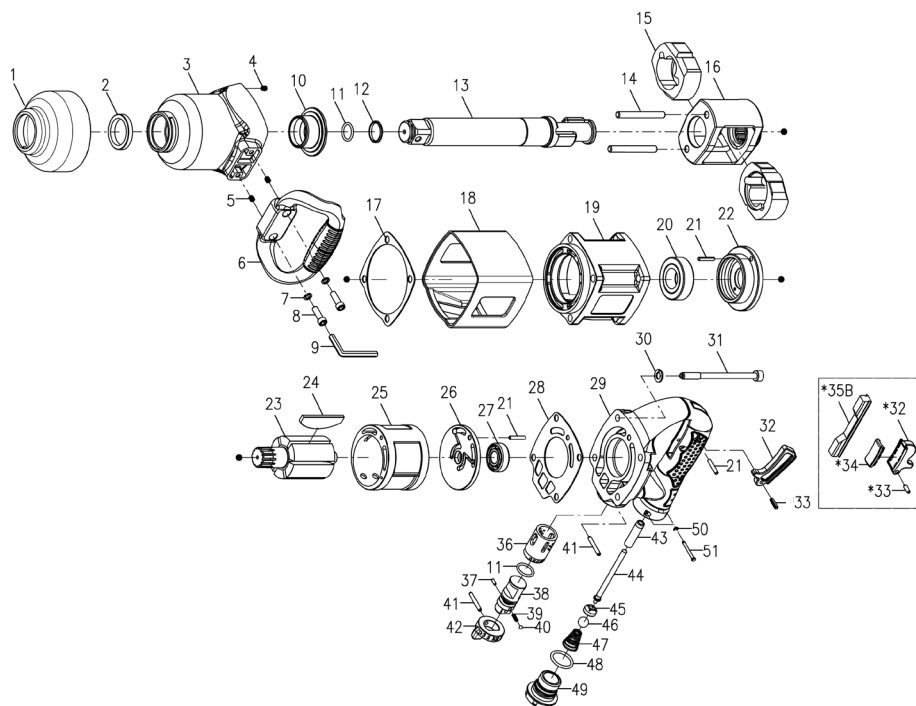

Index No.	Part No.	Description	Q'ty
1	315S-040B	Hammer Case Rubber	1
2	00-4238	Oil Seal	1
3	315S-002	Hammer Case	1
4	00-4303	Incerts Recoil	4
5	00-4314	Incerts Recoil	2
6	315S-020	D-Type Handle	1
7	00-1803	Spring Washer	2
8	00-0156	Cap Screw	2
9	00-3906	Hex. Wrench	1
10	315S-010	Anvil Bushing	1
11	00-4124	O-Ring	2
12	310-038	Anvil Collar	1
13	315S-011A8	Anvil	1
	315S-011C8	6" Anvil	
	315S-011D8	8" Anvil	
14	315S-016	Hammer Pin	2
15	315F-SR-017	Hammer	2
16	315S-012	Hammer Cage	1
17	315S-035	Front Gasket	1
18	315S-031B	Housing Band	1
19	315S-001	Motor Housing	1
20	00-2301	Ball Bearing	1
21	00-3321	Spring Pin	3
22	315S-005C	Front End Plate	1
23	315S-007	Rotor	1
24	315S-008	Rotor Blade	6
25	315S-006	Cylinder	1
26	315S-009C	Rear End Plate	1
27	00-2304A	Ball Bearing	1

Index No.	Part No.	Description	Q'ty
28	315S-032	Rear Gasket	1
29C	315S-004-B	Hand Frame	1
30	00-1804	Spring Washer	4
31	00-0158	Cap Screw	4
*32	315S-024	Inner Trigger	1
*33	00-3312	Spring Pin	1
*34	315S-025	Trigger Rubber	1
*35B	315F-039	Rubber Protector	1
32	315S-023	Outer Trigger	1
33	00-3312	Spring Pin	1
36	328-020	Reverse Valve Bushing	1
37	00-3307	Spring Pin	1
38	315S-021	Reverse Valve	1
39	322-023-B	Spring	1
40	00-3802	Steel Ball	1
41	00-3338	Spring Pin	2
42	315S-022B	Reverse Knob	1
43	315S-026	Valve Bushing	1
44	315S-027	Valve Stem (Inner)	1
45	568-026	Bushing	1
46	00-3809	Steel Ball	1
47	315S-029	Spring	1
48	00-4188	O-Ring	1
49C	315F-025A-B	Air Inlet (1/2" PF)	1
	315F-025B-B	Air Inlet (1/2" PT)	
	315F-025C-B	Air Inlet (1/2" NPT)	
50	00-3207	Snap Ring	2
51C	315S-034-B	Pin	2