


RRG-3621 BELT SANDER

VERSION 02

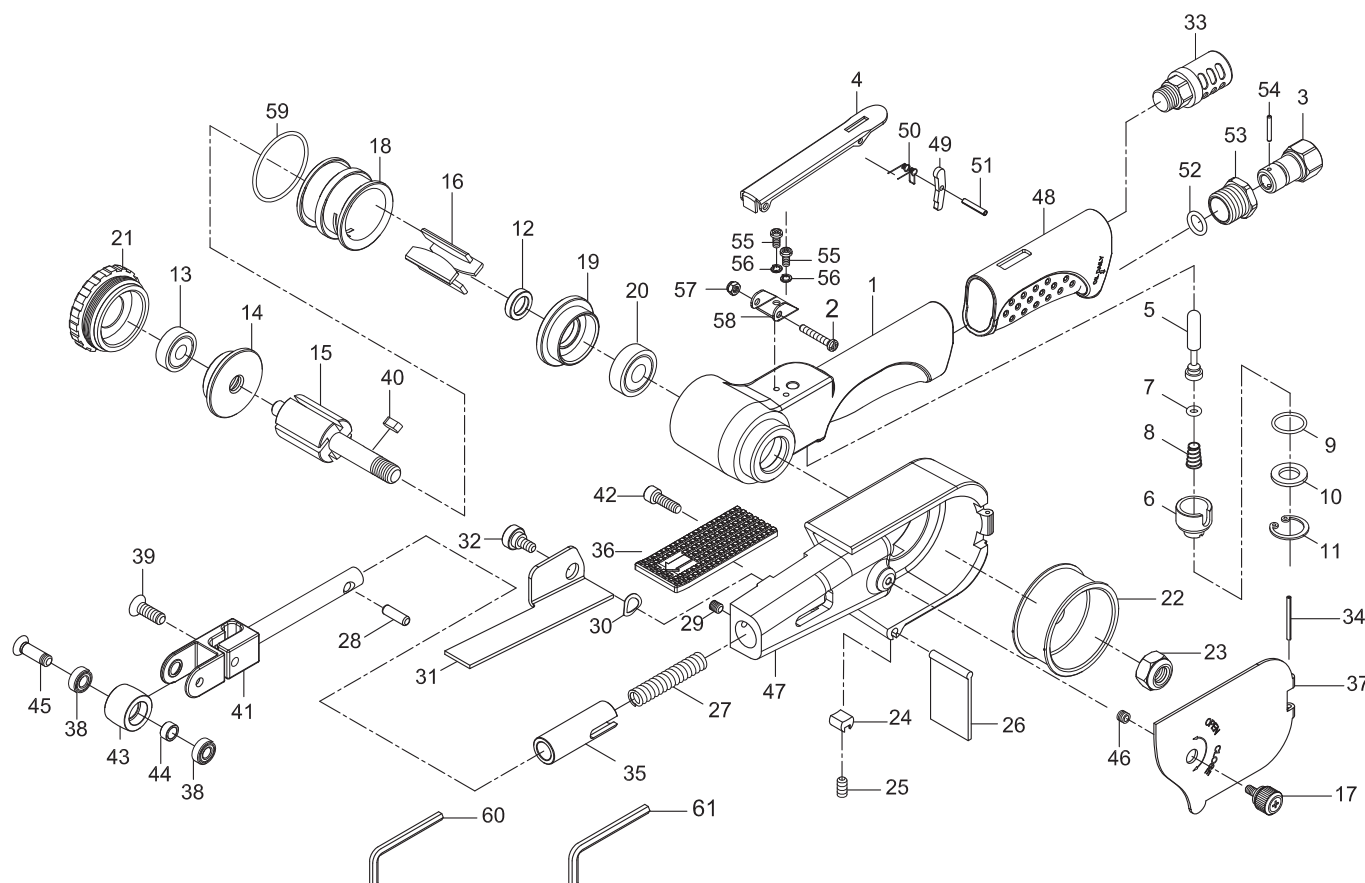

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	62001	Housing	32	6T-620221	Screw
2	6T-620030	Screw (M4*25L)	33	62056-11S	Muffler
3	6T-620003	Air Inlet	34	SP02002600	Spring Pin (2*26L)
4	6T-620004	Throttle Lever	35	6T-620235	Bushing
5	62005	Valve Stem	36	6T-620236	Finger Pad
6	62006	Valve	37	6T-620237	Guard
7	30107	O-Ring (3.9*1.9)	38	062045-12	Ball Bearing (2) (686ZZ)
8	62008	Spring	39	6T-620248	Screw (M6*18L)
9	62009	O-Ring (14.5*1.5)	40	62017	Key (4*4*10)
10	62010	Spacer	41	6T-620241	Tension Bar
11	62011	Retaining Ring (RTW-18)	42	40343	Screw (M5*16L)
12	62012	Spacer	43	6T-620243	Idle Pulley
13	030120	Ball Bearing (608ZZ)	44	6T-620250	Spacer
14	62014	Rear End Plate	45	6T-620244	Screw
15	6T-620215-12	Rotor	46	6T-620146	Screw Thread Inserts(#8-32UNC*1D)
16	62016-12	Rotor Blade (4)	47	6T-620202	Guard Body
17	6T-620107	Screw	48	6T-620052	Grip
18	62018	Cylinder	49	51540-228	Safety Bar
19	62019	Front End Plate	50	51541-12	Spring
20	051220	Ball Bearing (6000ZZ)	51	40337	Spring Pin (3*18L)
21	62021	Cap	52	40130	O-Ring (8.8*1.7)
22	6T-620247	Drive Pulley	53	6T-620007	Screw
23	62023	Nut (M10)	54	PN02001308	PIN (2*13.8)
24	6T-620207	Guard Body Luck	55	6T-620032	Screw (2) (M4*8L)
25	6T-620211	Screw (M5*10L)	56	40147	Spring Washer (2) (M4)
26	62026	Dust Cover	57	6T-620034	Nut (M4)
27	6T-620240	Spring	58	6T-620031	Lever Support
28	PN05001508	Pin (5*15.8L)	59	OR02607108	O-Ring (26.7*1.78)
29	40340	Screw (M5*5L)	60	10014	Hex. Key Wrench (4mm)
30	WW8	Wave Washer (WW8)	61	10010	Hex. Key Wrench (2.5mm)
31	6T-620224	Flat Shoe			

6T-6200-RA02